

TasWater serviced land and infrastructure maps

1. To access TasWater's serviced land and infrastructure maps, please click on the link below.



http://maps.thelist.tas.gov.au/

2. At the top of the screen enter the address, property ID or title reference in the **Maps** section (shown below) and press enter.



3. Click on the Layers arrow (shown below) at the top right hand corner of your screen.



I. The **Add Layer +** box (shown below) will appear on the right of the screen.



II. Click on the Add Layer + button




Issue date: 16/08/2016 Document No: PD16/61519 Page 1 of 4
Uncontrolled when printed Version No: 0.1



4. The Manage Layers box will appear, click on Infrastructure and Utilities and then select Water and Sewer.



- I. To add a layer of information, click on the **Add layer** button
- II. The selected layer will appear in the **Layer Information** column on the right hand side of your screen
- III. To remove a layer of information, click on the **Remove Layer** button
- IV. For more information on what each of the layers mean, click on the arrow located next to each layer (shown below as a green + button).

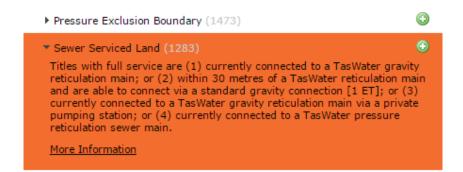

Issue date: 16/08/2016 Document No: PD16/61519 Page 2 of 4 Uncontrolled when printed Version No: 0.1



List of layers TasWater has on LISTmap

Name	Description
Water main	Water pipelines
Water hydrant	Fire hydrants and plugs
Water network structures	Water treatment plants, pumping stations and storages
Sewer main	Gravity sewerage pipelines
Sewer pressurised main	Pressurised sewerage pipelines, including rising mains
Sewer maintenance holes	Maintenance holes (manholes)
Sewer network structures	Sewage treatment plants and pumping stations
Recycled water main	Recycled water pipelines
Recycled water network structures	Recycled water pumping stations and storages
Stormwater main	Stormwater gravity pipelines operated by TasWater
Stormwater pressurised main	Stormwater pressurised pipelines operated by TasWater
Stormwater maintenance holes	Stormwater maintenance holes operated by TasWater
Stormwater network structures	Stormwater pumping stations operated by TasWater
Water serviced land	The land which TasWater will permit to be connected to its water infrastructure
Pressure exclusion boundary	The land which TasWater cannot provide the minimum water pressure service standard
Sewerage serviced land	The land which TasWater will permit to be connected to its sewerage infrastructure
Stormwater main	Stormwater gravity pipelines operated by TasWater

Issue date: 16/08/2016 Document No: PD16/61519 Page 3 of 4 Uncontrolled when printed Version No: 0.1



The LISTmap has a number of tools to navigate around the map to enable you to find what you are looking for. The basic navigation methods are described below. For detailed instructions, please click here.

Location search: a place name or an address can be entered in the orange search bar located at the top of the map, e.g. 169 Main Road Moonah.

Zoom: rolling the mouse wheel will zoom in or out. The slide bar in the top left can be used to zoom in and out by dragging the orange bar up or down or using the + and – buttons. Double clicking the left or right mouse button will zoom in or out respectively.

Pan: hold down the left mouse button and drag anywhere on the map.

Any feedback on omissions or errors would be appreciated. Please send feedback to enquiries@taswater.com.au

Issue date: 16/08/2016 Document No: PD16/61519 Page 4 of 4
Uncontrolled when printed Version No: 0.1