

Example of a Liquid Trade Waste Drainage Design Plan



to accompany "Application for Development Services" form


INSTALLATION OF PRE TREATMENT AT: (Business Name).....

(Address)

DATE: DESIGN BY: ACCREDITATION/LICENCE No.

ADDRESS: EMAIL: PHONE:

GREASE ARRESTOR INSTALLED IN ACCORDANCE WITH MANUFACTURERS AND TASWATER GUIDELINES/RECOMMENDATIONS.
 DRY BASKET ARRESTORS INSTALLED IN FOOD PREPARATION, WASH-UP SINKS AND FLOOR WASTE(S) IF APPLICABLE.

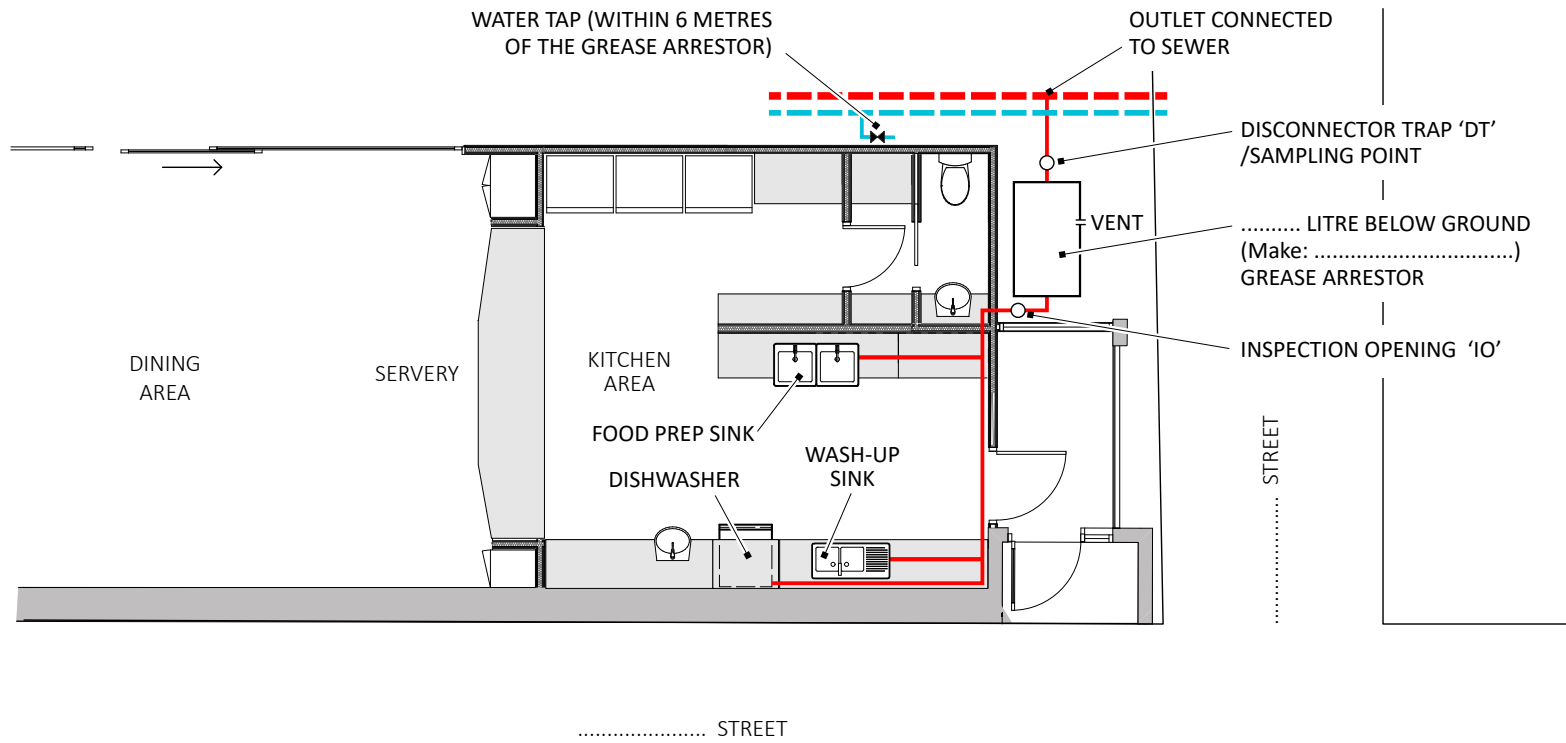

SCALE: 1:100